



INSTALLATION ESSENTIALS FOR SOLID FLOORING

Heritage Mill Solid Wood Flooring can easily be installed by nail down or staple down. Here are additional items recommended for each type of installation:

Looking to buy it now? Scroll over the to purchase the product!

MANUAL INSTALLATION

Nail/Staple Installations require the use of a 15 lb. asphalt felt

MANUAL NAILER:



16 Gauge
Manual Nailer
#402A

FASTENERS:



"T" Head
Flooring Cleats:

#42640 (1-1/2")

#42629 (2")

#42660 (2" - STAINLESS STEEL)

Use with
402A

PNEUMATIC INSTALLATION

Nail/Staple Installations require the use of a 15 lb. asphalt felt

PNEUMATIC NAILER:



18 Gauge
Floor Nailer
#418A

FASTENERS:



"L" Head
Flooring Cleats:

#41801 (1-1/4")

#41802 (1-1/2")

#41803 (1-3/4")

Use with
418A

PNEUMATIC STAPLER:



15 Gauge
Floor Stapler
#472A

FASTENERS:




1/2" Crown
Flooring Staples:

#47261 (2")

#4723 (2" -
BULK PACK)

Use with
472A

INSTALLATION ACCESSORIES

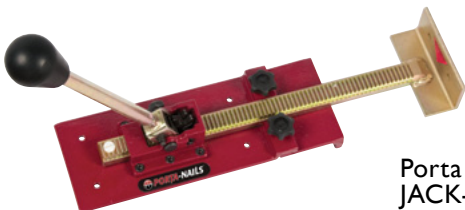

Porta
JACK-PRO
#47100



LONGNECK PLUS
6" Jamb Saw
#10-56